

The background of the page is a dark grey color. A white line-art outline of an acoustic guitar is centered vertically. The Ibanez logo is written in a white, elegant script font, overlapping the upper part of the guitar's body. Below the logo, the words "IBANEZ ACOUSTIC GUITAR" are written in a clean, white, sans-serif font. Two horizontal white lines are positioned above and below the preamp information text. At the bottom of the page, the website address "WWW.IBANEZACOUSTIC.COM" is written in a white, sans-serif font.

Ibanez

 
IBANEZ ACOUSTIC GUITAR

Preamp Information

AEQ-SP2

WWW.IBANEZACOUSTIC.COM

AEQ-SP2

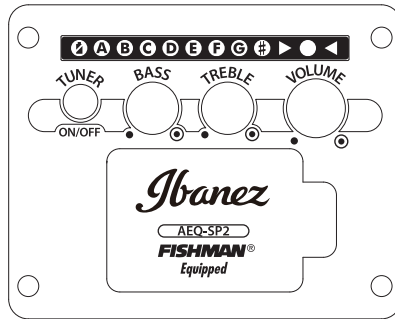

AEQ-SP2

Basic Controls

VOLUME

Controls the overall gain of the Pre-Amp.

TREBLE

Controls the boost/cut of the treble frequencies.

BASS

Controls the boost/cut of the bass frequencies.

Tuner functions

TUNER ON/OFF SWITCH

Pressing this button will alternately turn the tuning meter ON/OFF. The tuner will turn off automatically after 5 minutes.

NOTE INDICATER LED



These LEDs indicate the note of the strings you are playing. When tuning sharp or flat notes such as G#, both the G indicator and the # indicator will light up. If the note shown on the note indicator LED is different from the one you wish, try tightening or loosening the string until the correct LED lights up. Be careful not to tighten the strings too much (over tune) as the strings may break. When in doubt, it is better to tune down and loosen the strings and then tune back up to find the desired pitch.

TUNING GUIDE LED

When the string is in tune, the green LED in the middle will light up. If the pitch of the string is flat, the red LED on the left will light up. If the pitch of the string is sharp, the red LED on the right will light.

Notes

Replace the batteries if you notice any of the following things.

- Decreased sound quality or volume
- The tuner does not respond when you turn it on
- The LEDs do not operate when you turn on the tuner
- The battery check LED is lit or blinking

To prevent the battery from being consumed needlessly, disconnect the plug from the output jack when you're not using the guitar.

- ※ Dispose of used batteries in accordance with local regulations.
- ※ Appearance and specifications are subject to change without notice.

