


ATK (Standard bridge)

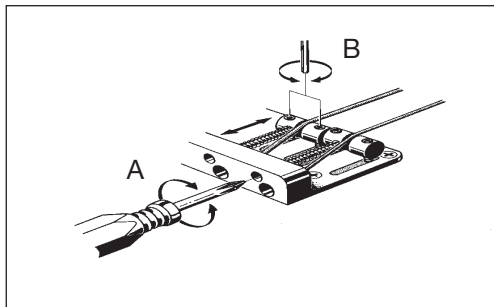

- A: Intonation adjustment screw
- B: Saddle height adjustment screw
(1.5mm hex key wrench)

STRING REPLACEMENT

Install the string from the back of the instrument through the string grommets or thread through the holes in the bridge.

*Note: When replacing strings, check with the dealer to make sure the new strings are long enough for the full scale length of the bass.

